











## **Usage method**



## Gas extraction / installation

- Lower the suction cup and press the pump
- Press repeatedly until the suction cups are firmed sucked
- For safe use status



## Air release disassembly

- Push the vent buckle point to the inside of the suction cup
- Air went into the rubber chassis at the rear
- White safety indicator line exposed, can remove suction cups

CONTACT CHINA MONEYPRO GROUP NOW:

EMAIL: SALES@MONEYPROUAV. COM

MOBILE: +86-18126437260 (WHAT'S UP) MS. AMY LUO